
T-Struts

Vector T-Struts can be used for custom assemblies or to fit existing cage assemblies. Available with three nut slots. As an alternative, mounting brackets (BR16A, available separately) may be used to attach struts to cages. Strut material is aluminum with clear anodized finish. Struts are attached to side panels with 10-32 screws (Part No. HD90).

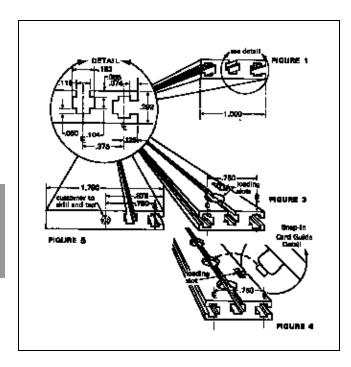

Figures showing T-Strut features - see table


NT4-7PA: Pkg 25 nuts in a plastic carrier for rapid loading into TS series middle groove


T-Struts Hardware Kit - HD34

HD34 is a complete connector mounting kit consisting of: 42, 4-40 screws (SC4-28)

42 nuts (NT4-2)

42 lockwashers

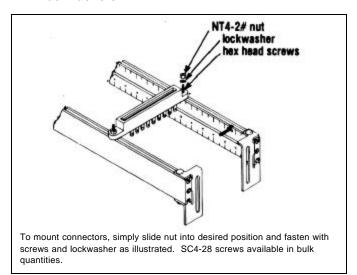

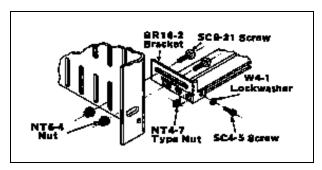

BR16A Bracket Kit includes two each BR16-1 (right) and BR16-2 (left) brackets plus installation hardware. Bracket assemblies are normally used on rear strut, though front strut may use them as well. HD90 Self-tapping Screws (pkg. 12 not shown) may also be used to mount T-struts to sidewalls.

End Part No.	Length	Width	Method of Fastening	Fig.	Description
TS81 TS81-5/90 TS169 TS169A TSW169 TS169-6/90	8.12" 8.12" 16.85" 16.85" 16.85" 16.85"	1" 1" 1" 1" 1.75"	BR16 Brackets or HD90 Screws BR16 Brackets or HD90 Screws BR16 Brackets or HD90 Screws BR16 Brackets or HD90 Screws HD90 Screws HD90 Screws	1 4 1 2 5 4	1" wide T-strut, Pk. of 1 each 1.75" wide T-strut, Pk. of 1 each 1" wide T-strut, Pk. of 1 each, dimpled for Snap-in guide insertion 1" wide T-strut, Pk. of 1 each 1" wide T-strut, Pk. of 1 each 1" wide T-strut, Pk. of 1 each 1.75" wide T-strut, Pk. of 1 each 1.75" wide T-strut, Pk. of 1 each
TS209 TS300 TS300A TSW300 TS600	20.85" 30.00" 30.00" 30.00" 60.00"	1" 1" 1" 1.75" 1.75"	BR16 Brackets or HD90 Screws Raw Stock Raw Stock Raw Stock Raw Stock/pkg.	1 1 2 5 3	

Custom lengths available on request



