## Release Protective Cover Locks Using Controller Signals or Pushbutton Switches after the Cutting Tool Stops Moving Due to Inertia

- A mechanical lock is applied automatically when the Operation Key is inserted. A high level of safety is achieved using a mechanism where the lock is only released when voltage is applied to the solenoid.
- Conforms to EN (TÜV) standards corresponding to the CE marking.
- Certified by UL, CSA and CCC standards.
- The Switch contact is opened by a direct opening mechanism (NC contacts only) when the protective cover is opened.
   Direct opening mechanism that is EN-certified is indicated by on the Switch.
- Auxiliary release key ensures easy maintenance and unlocks the door in the case of a power failure.
- Tough aluminum die-cast body incorporating a switch box with degree of protection satisfying IP67, UL, and CSA TYPE6P, 13.
- Equipped with a horizontal and vertical conduit opening.
- Models incorporating easy-to-see indicators for monitoring and those using an adjustable Operation Key for a swinging door are available.
- The mounting direction of the head can be changed to allow the Operation Key to be inserted from four directions.

## **Model Number Structure**

## Model Number Legend Switch

D4BL	-				-
	1	2	3	4	5

- 1. Conduit Size (2-conduit)
  - 1: PG13.5
  - 2: G1/2
  - 4: M20
- 2. Built-in Switch (with Safety Switch and Lock Monitor Switch Contacts)
  - C: 1NC/1NO (slow-action) + 1NC (slow-action)
  - D: 2NC (slow-action) + 1NC (slow-action)
- 3. Head Mounting Direction
- R: Four mounting directions possible (right-side mounting at shipping)
- 4. Door Lock and Release (Auxiliary Release Key is Incorporated by All Models)
  - A: Mechanical lock/24 VDC solenoid release
  - G: 24 VDC Solenoid lock/Mechanical release
- 5. Indicator Blank: Without indicator
  - A: 10 to 115 VAC or VDC driving (with orange and green LED indicator unit)

Note: Contact your sales representative for details on models with safety standard certification.





Be sure to read the "Safety Precautions" on page 13.

## **Operation Key**

- 1. Operation Key Type
  - 1: Horizontal mounting
  - 2: Vertical mounting
  - 3: Adjustable mounting (Horizontal)

## Switch

## D4BL -2GRD-AT 1 2 3 4 5

- 1. Conduit Size (2-conduit) 2: G1/2
- 2. Built-in Switch
- G: 2NC (slow-action) + 2NC (slow-action)
- Head Mounting Direction
   R: Four mounting directions possible (right-side mounting at shipping)
- 4. Door Lock and Release D: Mechanical lock/24 VDC solenoid release
- 5. Indicator lamp
  - A: Equipped with an orange/green LED display unit

## **Ordering Information**

## List of Models

## Switches (Operation Keys are sold separately.)

Consult with your OMRON representative when ordering any models that are not listed in this table.

Lock method	Conduit size	Voltage for solenoid	Without indicator 1NC/1NO+ 1NC (Slow-action)	With LED indicator 1NC/1NO+ 1NC (Slow-action)	Without indicator 2NC+ 1NC (Slow-action)	With LED indicator 2NC+ 1NC (Slow-action)
	PG13.5		D4BL-1CRA	D4BL-1CRA-A	D4BL-1DRA	D4BL-1DRA-A
Mechanical lock M20	24 VDC	D4BL-2CRA	D4BL-2CRA-A	D4BL-2DRA	D4BL-2DRA-A	
	M20		D4BL-4CRA	D4BL-4CRA-A	D4BL-4DRA	D4BL-4DRA-A
	Pg 13.5		D4BL-1CRG	D4BL-1CRG-A	D4BL-1DRG	D4BL-1DRG-A
lock	G1/2	24 VDC	D4BL-2CRG	D4BL-2CRG-A	D4BL-2DRG	D4BL-2DRG-A
	M20	1	D4BL-4CRG	D4BL-4CRG-A	D4BL-4DRG	D4BL-4DRG-A

Lock method	Conduit size	Voltage for solenoid	With LED indicator 2NC+ 2NC (Slow-action)	
Mechanical lock	G1/2	24 VDC	D4BL-2GRD-AT	

## **Operation Keys**

Mounting	Model	
Horizontal mounting		D4BL-K1
Vertical mounting		D4BL-K2
Adjustable mounting		D4BL-K3

## **Operation Key**

- 1. Operation Key Type
  - 1: Horizontal mounting
  - 2: Vertical mounting3: Adjustable mounting (Horizontal)

: Models with certified direct opening contacts.

## **Standards and EC Directives**

## Conforms to the following EC Directives:

- Machinery Directive
- EN ISO 14119
- EN 60204-1

## **Certified Standards**

Certification body	Standard	File No.	
TÜV Rheinland	EN60947-5-1 (certified direct opening) GS-ET-19	Consult your OMRON representative for details.	
UL	UL508	E76675	
CSA	CSA C22.2, No.14	LR45746	
CQC (CCC)	GB14048.5	2003010305073836	

## Certified Standard Ratings TÜV (EN60947-5-1), CCC (GB14048.5)

Item Type	Standard model	Indicator model
Utilization category	AC-15	AC-15
Rated operating current (le)	3 A	6 A
Rated operating voltage (Ue)	250 V	115 V

Note: Use a 10 A fuse type  ${\rm gI}$  or  ${\rm gG}$  that conforms to IEC60269 as a short-circuit protection device.

## UL/CSA (UL508, CSA C22.2 No. 14)

A300

Carry ourropt	Current (A)		Volt-amperes (VA)	
Carry Current	Make	Break	Make	Break
10.4	60	6	7 200	720
IUA	30	3	7,200	720
	Carry current	Carry current Make 10 A 60	Carry current         Make         Break           10 A         60         6	Carry current         Make         Break         Make           10 A         60         6         7.200

Note: The UL/CSA certified rating for products with indicators (-A) is 6 A/115 VAC.

## **Characteristics**

Degree of protection >	k1	IP67 (EN60947-5-1)			
Durability *2	Mechanical	1,000,000 operations min.			
Durability *2	Electrical	500,000 operations min. (10 A resistive load at 250 VAC)			
Operating speed		0.05 to 0.5 m/s			
Operating frequency		30 operations/minute max.			
Direct opening force *	k3	19.61 N min. (EN60947-5-1)			
Direct opening travel	<b>*</b> 3	20 mm min. (EN60947-5-1)			
Holding force		700 N min. (GS-ET-19)			
Contact resistance		50 mΩ max.			
Rated insulation volta	ge (Ui)	300 V (EN60947-5-1)			
Rated frequency		50/60 Hz			
Protection against ele	ctric shock	Class I (with ground terminal)			
Pollution degree (ope	rating environment)	3 (EN60947-5-1)			
	Between terminals of same polarity				
Impulse withstand	Between terminals of different polarity	4 kV			
voltage (EN60947-5-1)	Between each terminal and ground				
	Between solenoid and ground	2.5 kV			
Insulation resistance		100 MΩ min. (at 500 VDC)			
Contact gap		2 × 2 mm min.			
Vibration resistance	Malfunction	10 to 55 Hz, 0.35 mm single amplitude			
Shock resistance	Destruction	1,000 m/s² min.			
SHOCK TESISLATICE	Malfunction	300 m/s² min.			
Conditional short-circuit current		100 A (EN60947-5-1)			
Conventional enclosed thermal current (Ithe)		10 A (EN60947-5-1)			
Ambient operating temperature		-10 to 55°C (with no icing)			
Ambient operating hu	midity	95% max.			
Weight		Approx. 800 g			

Note: The above values are initial values.

\*1. The degree of protection is tested using the method specified by the standard (EN60947-5-1). Confirm that sealing properties are sufficient for the operating conditions and environment beforehand. Although the switch box is protected from dust, oil or water penetration, do not use the D4BL in places where dust, oil, water, or chemicals may enter through the key hole on the head, otherwise Switch damage or malfunctioning may occur.

**\*2.** The durability is for an ambient temperature of 5 to 35°C and an ambient humidity of 40% to 70%.

**\*3.** These figures are minimum requirements for safe operation.

#### **Solenoid Coil Characteristics**


Item Type	24 VDC mechanical lock models 24 VDC solenoid lock models				
Rated operating voltage	24 VDC <sup>+10%</sup> <sub>-15%</sub> (100% ED)				
Current consumption	Approx. 300 mA				
Insulation class	Class B (130°C or less)				

### **Indicator Characteristics**

Rated voltage	10 to 115 VAC/VDC
Current leakage	Approx. 1 mA
Color (LED)	Orange, green

## **Structure and Nomenclature**

## Structure

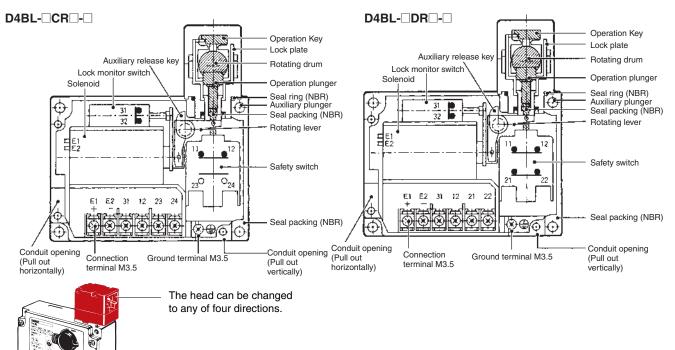


## Contact Form (Diagrams Show State with Key Inserted and Lock Engaged)

	Contact	Conta	ct form		
Model	(door open/ closed detection and lock monitor)	Lock monitor	Door open/ closed detection	Operating pattern	Remarks
D4BL-⊡CR⊡-⊡	1NC/1NO+1NC	LOOK INOTINO	Door open/closed detection 11 - 20 12 23 24	Lock position 31-12 23-24 Stroke Operation Key insertion completion position position	Only NC contacts 11-12 have a certified direct opening mechanism. The terminals 11-12 and 23-24 can be used as unlike poles.
D4BL-□DR□-□	2NC+1NC	LOOK INOTINO	Door open/closed detection $11 \xrightarrow{Zb}$ 12 $12 \xrightarrow{Zb}$ 22	Lock position 31-12 21-22 Stroke Operation Key insertion completion position Dosition	Only NC contacts 11-12 and 21-22 have a certified direct opening mechanism. → The terminals 11-12 and 21-22 can be used as unlike poles.

Note: The EN-certified direct opening mechanism is indicated by  $\bigoplus$  on the Switch.

## Contact Form (D4BL-2GRD-AT)




## **Dimensions and Operating Characteristics**

(Unit: mm)


## Switches

D4BL-00R0-0

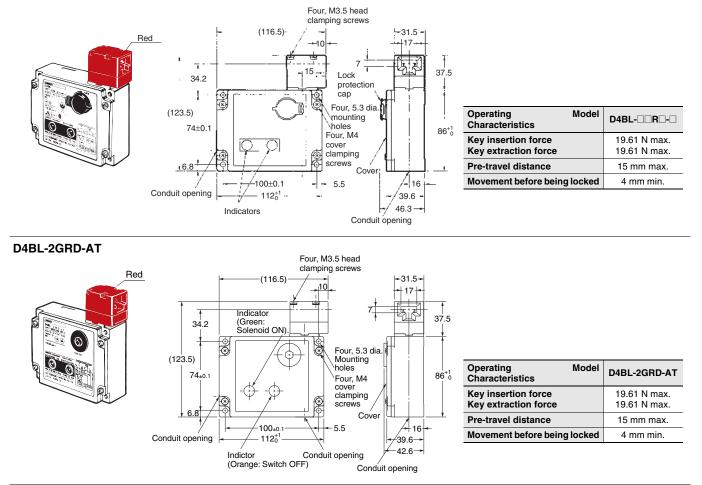


- **Note: 1.** Unless otherwise specified, a tolerance of  $\pm 0.4$  mm applies to all dimensions.
  - 2. There are fluctuations in the contact ON/OFF timing for 2NC contacts. Confirm performance before application.

## D4BL

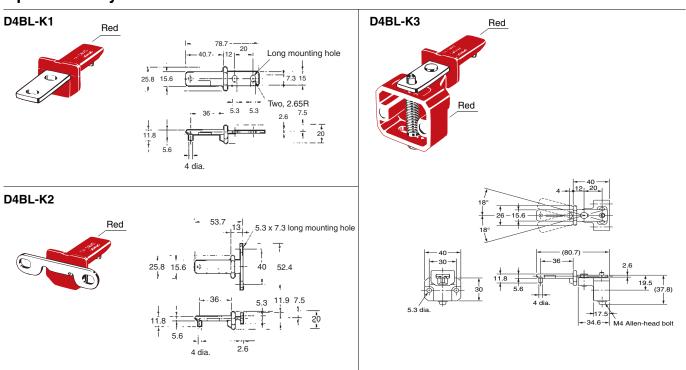

## **Operation Keys**

## D4BL

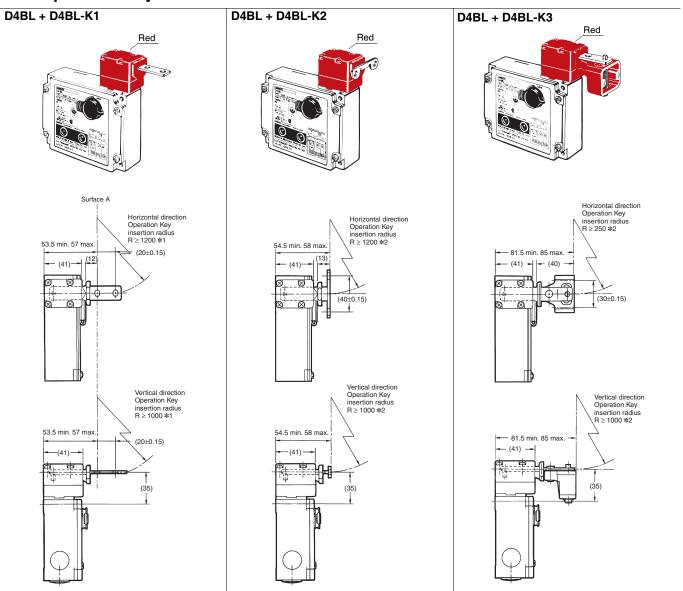

## With Operation Key Inserted


Note: 1. Unless otherwise specified, a tolerance of  $\pm 0.4$  mm applies to all dimensions.

2. In the above diagrams, the Operation Key is inserted from the front.

\*1. The insertion radii apply when the rotational center of the Operation Key in on surface A in the figures.


\*2. The insertion radii apply when the rotational center of the Operation Key in on the Operation Key installation surface.

## **Indicator Unit**

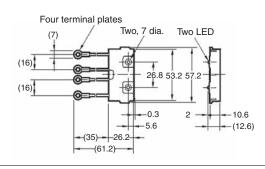


## Connections

## Internal Circuit Diagram Indicator




## Solenoid




## **Circuit Connection Example**


- Terminals 11 and 32 are connected internally and so connect terminals 12 and 31 for safety-circuit input. (GS-ET-19).
- When using indicators, connect them to the auxiliary circuit side (monitor circuit) or in parallel between E1 and E2 as shown below.
- Do not connect the indicators in parallel with the direct opening contact. If the indicators are broken, a short-circuit current may flow, causing equipment to malfunction.
- The 24 VDC solenoid terminals have polarity. Confirm the polarity before wiring.
- 1. Orange: Lights when the solenoid turns ON. Green: Lights when the door opens.

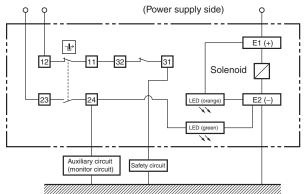


3. Orange: Lights when the solenoid turns ON. Green: Lights when door closes.

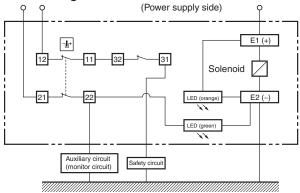

2. Orange: Lights when the solenoid turns ON. Green: Lights when power turns ON.

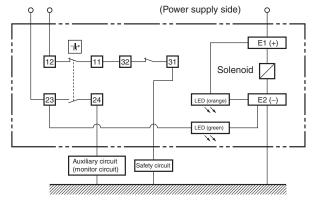


4. Orange: Lights when the solenoid turns ON. Green: Lights when power turns ON.

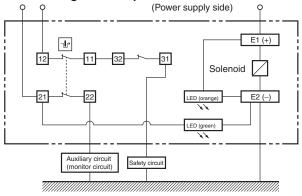


## Connection Example with OMRON's G9SA Safety Relay Unit

## G9SA-321-T (24 VAC/VDC) + D4BL-DRA- (Mechanical Lock Type) Circuit Diagram (Manual Reset)

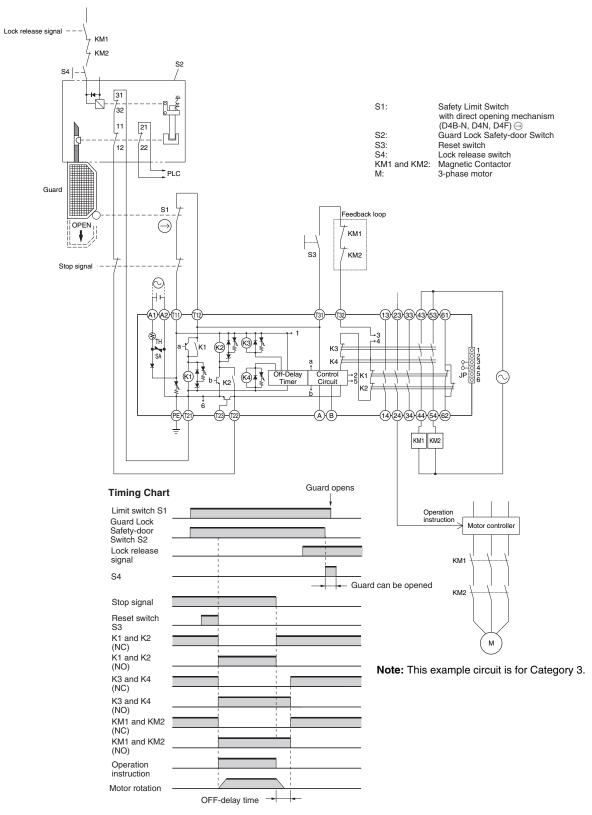

## G9SA-301 (24 VAC/VDC) + D4BL- DRG- (Solenoid Lock Type) Circuit Diagram (Auto-reset)

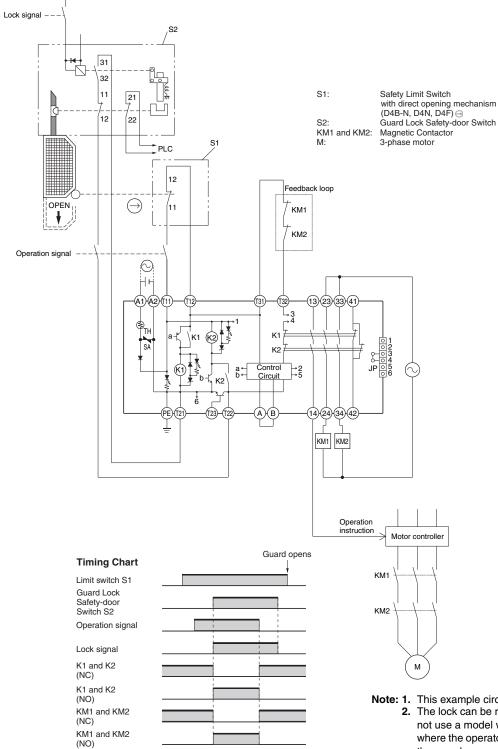

Note: 1. This example circuit is for Category 4.
2. The lock can be released at any time. Therefore, do not use a model with a solenoid lock in applications where the operator may be exposed to danger when the guard opens. Use a model with a mechanical lock.

## Safety Precautions

#### • Be sure to read the precautions for all D4BL models in the website at: http://www.ia.omron.com/.

#### 

Injury may occasionally occur. Always check to make sure that the safety functions operate correctly before using the machine. The safety functions may not operate correctly because of wiring mistakes, setting mistakes, or Switch malfunction, causing some machines to continue operating in situations where they should be stopped.

Injury may occasionally occur. If the machine is used with the release key in the UNLOCK position, the electromagnetic lock may not operate, causing some machines to continue operating in situations where they should be stopped. Be sure to put the release key in the LOCK position before using the machine. Also, check the condition of the lock and safety circuits.




Injury may occasionally occur. When the electromagnetic lock function or Switch function is damaged, some machines may continue operating in situations where they should be stopped. Do not use the electromagnetic lock function of the Switch in place of a door lock. Always provide a lock separate from the Switch, attach a warning seal to prevent people from using excessive force to open the door when it is locked, or provide an indicator lamp to show the locked/unlocked status of the door.

## **Precautions for Safe Use**


- · Do not use the Switch submersed in oil or water or in locations continuously subject to splashes of oil or water. Doing so may result in oil or water entering the Switch. (The IP67 degree of protection of the Switch specifies the amount of water penetration after the Switch is submerged in water for a certain period of time.)
- Always attach the cover after completing wiring and before using the Switch. Also, do not turn ON the Switch with the cover open. Doing so may result in electric shock.
- · Make sure the Switch is mounted securely to prevent it from falling off. Otherwise injury may result.


#### **Stopper Installation**

Do not use a Switch as a stopper. Be sure to install a stopper as shown in the following illustration when mounting the Switch so that the Operation Key is within 0.5 to 5 mm of the set zone. Do not subject the Switch to a shock that exceeds the Switch's shock resistance of 1,000 m/s<sup>2</sup>.

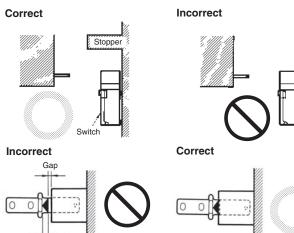

Set zone





## **Precautions for Correct Use**


#### Appropriate Tightening Torque

Loose screws may result in malfunction. Tighten the screws to the specified torques.

No.	Туре	Appropriate tightening torque
1	M3.5 terminal screw (including terminal screw)	0.59 to 0.78 N·m
2	Cover mounting screw	1.18 to 1.37 N·m
3	Head mounting screw	0.78 to 0.98 N·m
4	M5 body mounting screw *	4.90 to 5.88 N·m
5	Operation Key mounting screw	2.35 to 2.75 N·m
6	Connector	1.77 to 2.16 N·m
7	Cap screw	1.27 to 1.67 N·m


\*Use M5 screws. Apply a torque of 4.90 to 5.88 N·m for an Allen-head bolt. For a pan head screw, apply a torque of 2.35 to 2.75 N·m

5. Two, M5 Operation Key mounting screw

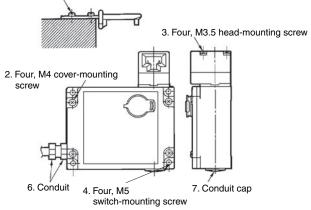

#### Auxiliary Release Key

- The auxiliary release key is used to unlock the D4BL in case of emergency or in case the power supply to the D4BL fails.
- Use the enclosed Release Key to change the lock from LOCK to UNLOCK so that the lock will be released and the door can be opened. (Applies only to mechanical locks. Release key is not provided with D4BL-2GRD-AT.)



- When a Switch with a solenoid lock is in a locked state (i.e., when the solenoid is ON), do not change the release key from the LOCK to the UNLOCK position. Internal parts may be damaged.
- · Whenever the lock has been changed to UNLOCK, always return it to LOCK before using the Switch.
- Do not use the auxiliary release key to start or stop machines.
- Make sure that the auxiliary release key is kept with the person in charge.
- To prevent the auxiliary release key from being handled carelessly by unauthorized people, seal the auxiliary release key with sealing wax and the provided seal cap to ensure IP67.
- Before attaching the cover to the D4BL, make sure that the auxiliary release key position is set to LOCK.


## **Solenoid Lock Models**


The solenoid lock locks the door only when power is supplied to the solenoid. Therefore, the door will be unlocked if the power supply to the solenoid stops. Therefore, do not use solenoid lock models for machines that may be operating and dangerous even after the machine stops operating.

#### Switch and Operation Key Mounting


Use four M5 screws and spring washers to mount the Switch and Operation Key, and tighten the screws to a suitable torque. To ensure safety, use screws that cannot be easily removed or another means to prevent the Switch and Operation Key from easily being removed.

#### Mounting Dimensions Switch Mounting Dimensions




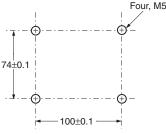


## Operation Key Mounting Holes D4BL-K1



D4BL-K2








#### **Operation Key**

- The D4BL is provided with a shock-absorbing damper to protect the D4BL from damage that may result from dropping the D4BL during transportation. Be sure to remove the damper after mounting the D4BL.
- The mounting tolerance of the Operation Key is ±0.3 mm vertically or horizontally. Be sure to mount the D4BL correctly without misalignment, otherwise the D4BL may soon break or wear out.
- Observe the specified insertion radius for the Operation Key and insert it in a direction perpendicular to the key hole.

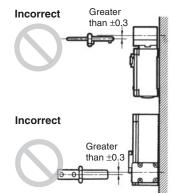


• Do not use the D4BS operation key.

#### **Head Direction**

 The head can be mounted in four directions by loosening the four screws holding the head. To remove the head, turn the head at the surface mating with the Switch body by 45° as shown in figures (A) and (B) below.

To change the direction of the head, make sure that the protruding part of the rotating lever engages with the groove of the plunger. Then turn the head clockwise or counterclockwise to the desired direction. At that time, make sure that the groove of the plunger is located under the rotating lever. If the direction of the head is not set when the plunger is rotated by 45°, the groove of the plunger presses the rotating lever. The head, plunger, or the built-in switch may be damaged as a result.


#### **Head Direction Changes**

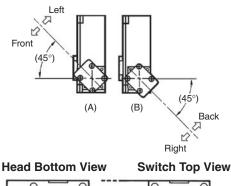

# per and Rotation lever and

Operation plunger and groove mechanism

#### Normal Positions of Rotating Lever and Plunger

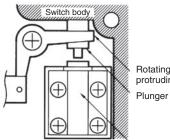

Rotating lever (with protruding part) Plunger (with groove)


Built-in switch

protruding part

- Be sure to check the mechanical lock and solenoid release functions when mounting the D4BL.
- If the head direction is changed, recheck the tightening torque of each of screw. Make sure that no foreign materials will enter through the key hole on the head.

## Processing and Connecting Cable/ Conduit

- The following procedures are recommended for mounting and wiring the indicator unit securely.
- To ensure IP67, use OMRON's SC-□M and Nippon Flex's ABS-08Pg13.5 and ABS-12 Pg13.5 Connectors.
- Recommended cable: UL2464-type cable that is AWG20 to AWG18 (0.5 to 1.0 mm<sup>2</sup>) in size and has seven conductors
- Connect the indicator unit after connecting the seven-conductor cable.

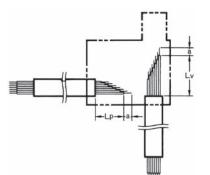


Terminal no.	Lp (mm)	Lv (mm)	a (mm)
E1	30±2	80±2	
E2	35±2	75±2	
31	45±2	60±2	8±1
12	55±2	50±2	
23 (21)	65±2	45±2	
24 (22)	70±2	35±2	
	90±2	50±2	

• Properly attach and securely tighten the provided conduit cap to the unused conduit opening to the suitable tightening torque when wiring the D4BL.

#### **Cable Connection Example**

1. Connect the wires to the terminals in the order shown below for wiring efficiency.

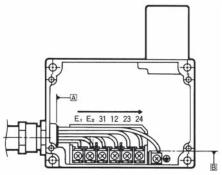

Tighten each wired terminal clockwise to a torque of 0.59 to 0.78  $\text{N}{\cdot}\text{m}{.}$ 



Twist the wire two or three times and make sure that no bare wire exists outside the terminal when tightening the terminal.

2. The insulation sheath of the seven-conductor cable must come into contact with the wall of the conduit mouth, side A or side B.



Insulation sheath edge

#### Others

Do not touch the solenoid because the solenoid radiates heat while power is being supplied.

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

**OMRON** Corporation Industrial Automation Company